





TALON[®] CLIP ASSEMBLING GUIDE


Installation

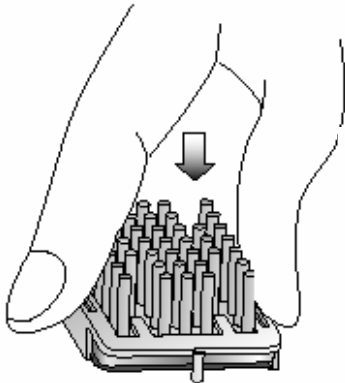


4. Press down on other side to fasten onto the BGA chip set.

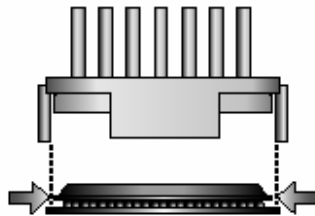

3. To make sure the stand off are at the right position on both side

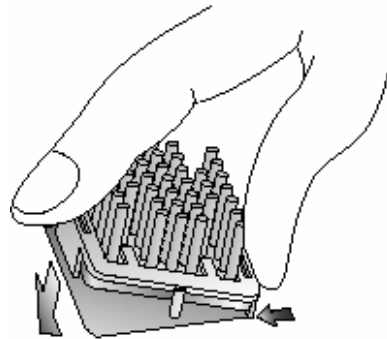


2. Snap on the other Clip alongside BGA chip set

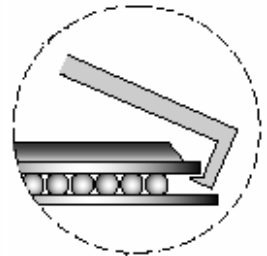


1. Slip one side of the clip under edge of BGA chip set .


Removing

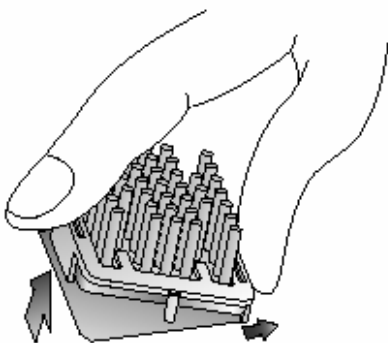

3. Remove loosened snap on clip and heat sink.

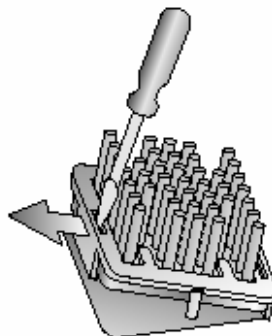

2. With moderate pressure, pull back on the screw driver to dislodge clip.

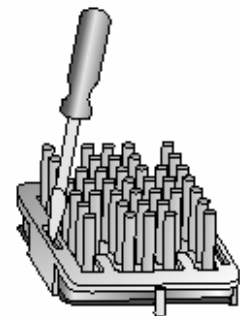

1. Use a flat tip screw driver into any of holes provided on snap on clip.